 


PHILIPS

DST2010, DST2020
DST2030



Lea cuidadosamente el instructivo antes de usar su aparato

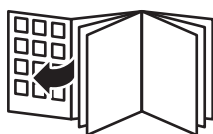


English 6
Azərbaycanca 21
Bahasa Indonesia 36
Bahasa Melayu 51
Čeština 66
Dansk 81
Deutsch 96
Eesti 111
Español 126
Français 141
Hrvatski 156
Italiano 171
Latviešu 186
Lietuviškai 201
Magyar 216
Nederlands 231
Norsk 246
O'zbek 261
Polski 276
Português 291
Português do Brasil 306
Română 321
Shqip 336
Slovenščina 351
Slovensky 366
Srpski 381
Suomi 396
Svenska 411
Tiếng Việt 426
Türkçe 441
Türkmençe 456
Ελληνικά 471
Български 486
Кыргызча 501
Македонски 516
Русский 531

Тоҷикӣ 546
Українська 561
Қазақша 576
Հայերեն 591
ગુજરાતી 606
ქართული ენა 622
简体中文 638
繁體中文 653
한국어 668
العربية 683
فارسی 698

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at **www.philips.com/welcome**. Read this user manual, the important information leaflet, and the quick start guide carefully before you use the appliance. Save them for future reference.

 Product overview

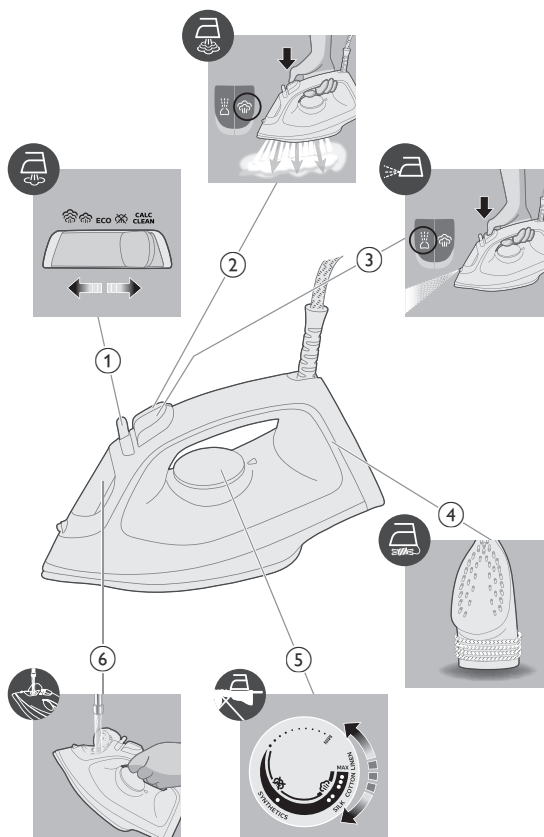

- 1 Steam selector
- 2 Steam boost button
- 3 Water spray
- 4 Cord winding
- 5 Temperature dial
- 6 Water tank lid

Using the appliance

Preparing for use

Note: The iron may give off some steam when you use it for the first time. This stops after a short while.


Type of water to use

The appliance is suitable to be used with tap water. However, if you live in an area with hard water, we recommend that you mix an equal amount of tap water with distilled or demineralized water. This will prevent fast scale build up and prolong the lifetime of the appliance.


Do not add perfume, water from the tumble dryer, vinegar, starch, descaling agents, ironing aids, chemically descaled water or other chemicals, as they may cause water spitting, brown staining or damage to your appliance.

Filling the water tank


- 1 Do not plug in the appliance.

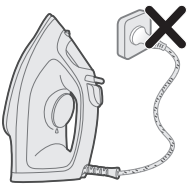


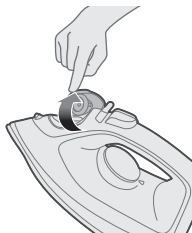
- 2 Ensure the appliance is cooled down.

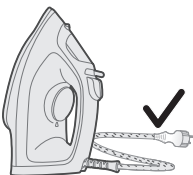


8 English

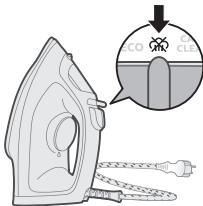


3 Slide the steam selector to the right to select no steam mode (dry ironing) .



4 Flip open the water tank lid.

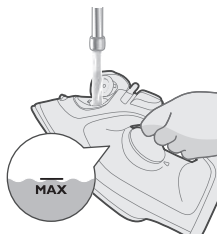



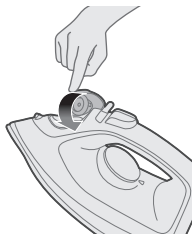


5 Fill water tank up to the MAX indication in the water tank.



6 Close the water tank lid firmly.

Setting the temperature



	MAX LINEN	 / 
	● ● ● COTTON	 / 

	● ● SILK	ECO
	● SYNTHETICS	

ECO



ECO setting: Minimum constant steam is delivered continuously for garments with less creases. This setting also saves energy.



Two steam clouds: More constant steam is delivered continuously for tough creases.




Three steam clouds: Maximum constant steam is delivered continuously for stubborn creases.

Using the appliance


- 1 Check the garment label for the required ironing.




10 English

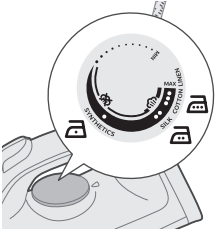


- 2 Set the temperature dial to the required ironing temperature by turning it to the appropriate temperature indication.

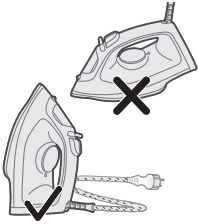


- 3 Allow the iron to rest on its heel.

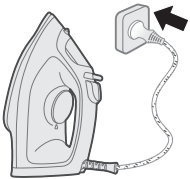

- 4 Plug the appliance in an earthed wall socket.

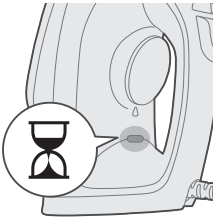


- 5 The iron ready light will light up, indicating iron is heating up.

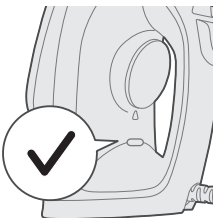


- 6 When the iron ready light has gone out, wait a while before you start ironing. The ready light will go on from time to time during ironing.

No steam/Dry ironing

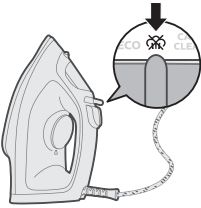



- 1 Set steam setting to no steam setting.

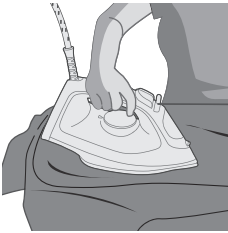


- 2 After a short while, steam will cease during ironing.

Water spray

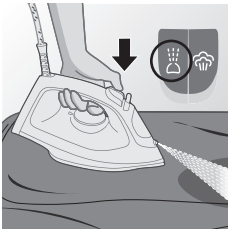

- 1 Set steam setting to no steam setting. Press and release the water spray button  for a stream of mist to remove stubborn creases.

Steam boost

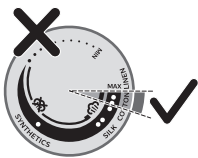

- 1 Set temperature dial to MAX setting between cotton and linen.


12 English



- 2 Press and release the steam boost button for a powerful boost of steam to remove stubborn creases.




- 3 You can use the steam boost function when you hold the iron in vertical position for removing creases from hanging garments (for DST2020 and DST2030 only).

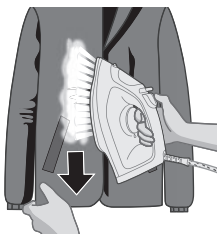

- 4 Pull and stretch your garment while applying steam boost to remove stubborn creases (for DST2020 and DST2030 only).




- 5 Do not use your bare hand as a supporting surface when you iron.

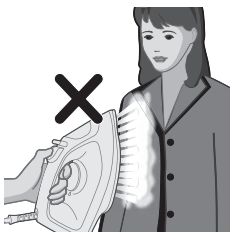


- 6 Do not position the appliance towards yourself/ another person.


Auto shut off (DST2030)

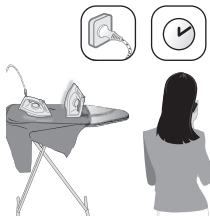


- 1 To give you a peace of mind, the appliance will cool down on its own if it is left unattended for a period of time.

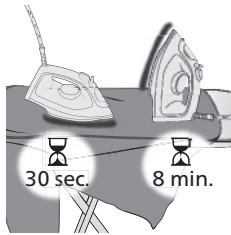


- 2 When the appliance is not in use for more than 30 seconds resting on its soleplate or 8 minutes resting on its heel/ base, the appliance will enter auto shut off mode.

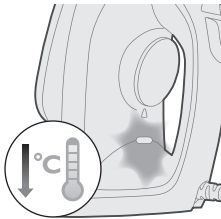


- 3 The temperature of the appliance will decrease in auto shut-off mode. The iron ready light will also flash non-stop to indicate the appliance is at auto-off status. To completely switch off the appliance, unplug the appliance from the socket.

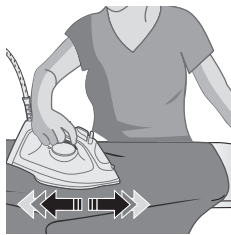

- 4 To let the appliance heat up again, pick up the appliance or move it slightly.

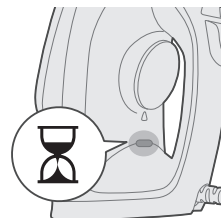



- 5 The iron ready light will light up, indicating the appliance is heating up.

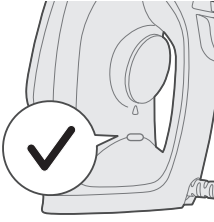


- 6 Once the iron ready light turns off, the appliance is ready to use.

Cleaning and maintenance

- 1 Ensure appliance is not plugged in.

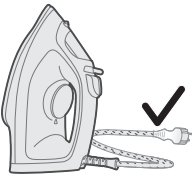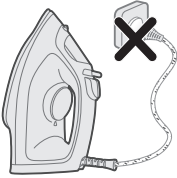

- 2 Ensure the appliance has cooled down.

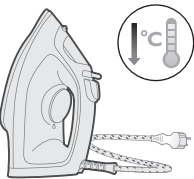


- 3 Wipe flakes and other deposit off the soleplate with a damp cloth.





Note: To keep the soleplate smooth, avoid hard contact with metal objects. Never use a scouring pad, vinegar or other chemicals to clean the soleplate.

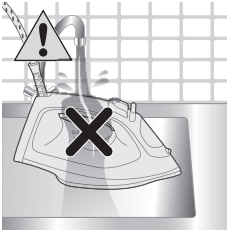


- 4 Do not wash/ clean the appliance under running water.


Calc-Clean



Tip: The Quick Calc Release function can be used at any time. If you live in a hard water area, use the function more frequently.

- 1 After 1 month of use, it is recommended to perform calc clean to remove scales collected from your appliance to prolong its life and ensure the appliance heats up.

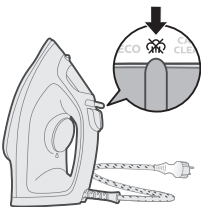


- 2 Make sure the iron is unplugged and the steam setting is set to no steam mode (dry ironing) .




3 Fill the water tank to the MAX indication.




4 Set the temperature dial to MAX.

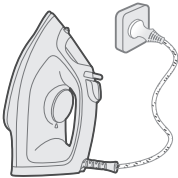

5 Plug in appliance to an earthed wall socket.

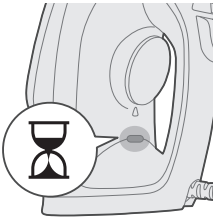


6 The iron ready light will light up, indicating the appliance is heating up.

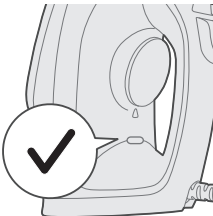


7 Wait for iron ready light to go out.

- 8** Unplug the iron.

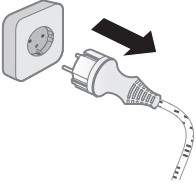

- 9** Slide the steam selector to the Calc-Clean position and hold it.

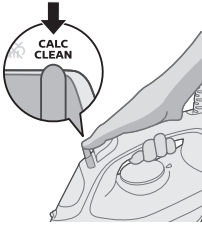


- 10** Hold the iron over the sink and gently shake the iron. Hot water and calc particles will be released from the soleplate.

Caution: While scale is flushed out, steam and boiling water also come out of the soleplate.




- 11** Continue to shake the iron until all the water in the water tank has been released.

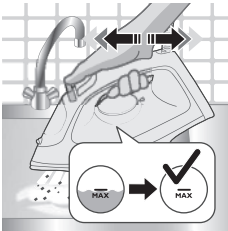


- 12** Plug in the appliance and let the appliance heat up to dry the soleplate. This takes about 2 minutes.



18 English

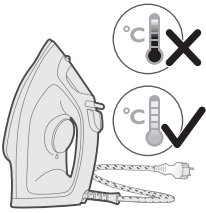


13 Let the iron cool down.

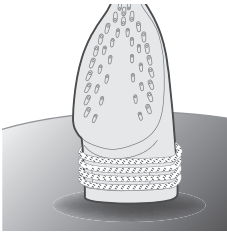


14 Wind the cord around the heel of the iron.


Storage

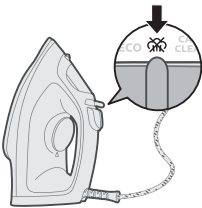


1 Slide the steam selector to select no steam mode (dry ironing) .

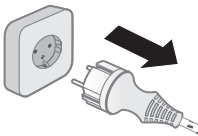


2 Unplug the appliance.

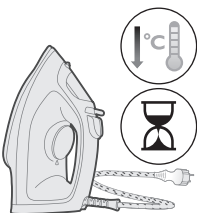

3 Let the appliance cool down.

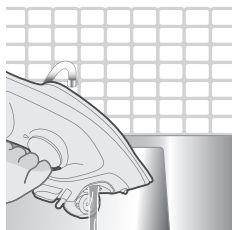

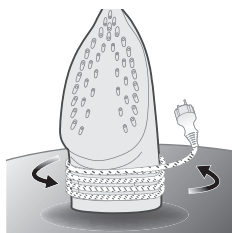


- 4 Pour any remaining water out of the water tank.





- 5 Wind the power cord around the main body of the appliance.

Trouble shooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem	Possible cause	Solution
The iron cannot remove wrinkles from the garment.	There is no steam during ironing.	Fill the water tank and set the steam slider to  .
The iron does not produce any steam.	There is not enough water in the tank.	Fill the water tank.
	The steam slider is set to  .	Set the steam slider to  .
Water droplets drips onto the garment during ironing.	The iron is not hot enough yet to product steam.	When the iron is heating up, the "iron-ready" light is steady on. When the iron is ready for use, the light turns off.
	You have used the boost function too often within a short period.	Continue ironing in horizontal position and wait a while before you use the steam boost function again.
	You have not closed the water tank lid properly.	Press the lid until you hear a 'click'.

20 English

The iron does not produce a steam boost.	You have used the steam boost function too often within a short period.	Continue ironing in horizontal position and wait a while before you use the steam boost function again.
	The iron is not hot enough for ironing yet.	Wait until the 'iron ready' light has stopped flashing and lights up steadily.
	You have put a chemical into the water tank.	Rinse the water tank and do not put any perfume or chemicals into the water tank.
Water drips from the soleplate after the iron has been unplugged.	The steam slider is set to  .	Set the steam slider to  .
	You have put the iron in horizontal position with water still left in the water tank.	Empty the water tank after use, or store the iron in vertical position.
The iron leaves a shine or an imprint on the garment.	The surface to be ironed was uneven, for instance because you ironed over a seam or a fold in the garment.	The iron is safe to use on all ironable garments. The shine or imprint is not permanent and disappears when you wash the garment. Avoid ironing over seams or folds. You can also place a cotton cloth over the area to be ironed to avoid imprints.